



CBS CODES:

HOW TO SET YOUR BOX TO ALWAYS REQUIRE A CBS CODE

Each keybox will automatically require all affiliate members to have a CBS code to open the box. You can also set your keybox to require this code for all agents. The keybox must be in "My Keyboxes" and you must have the shackle code and be near the box to make this change.

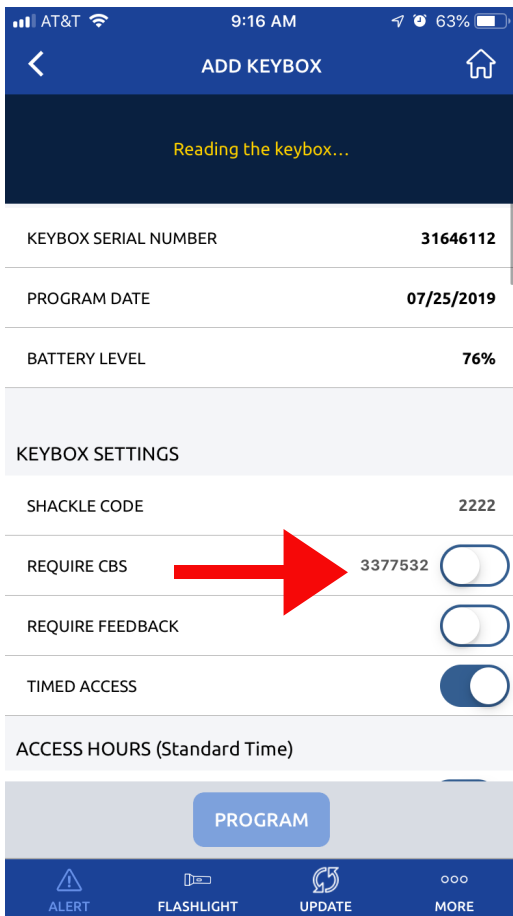

First, select the keybox serial number under My Keyboxes, and click on the program key box option. Scroll down until you see the option that says require "CBS Code". Toggle this switch on. (make it blue). This will require that you give the CBS code to everyone who opens this box.

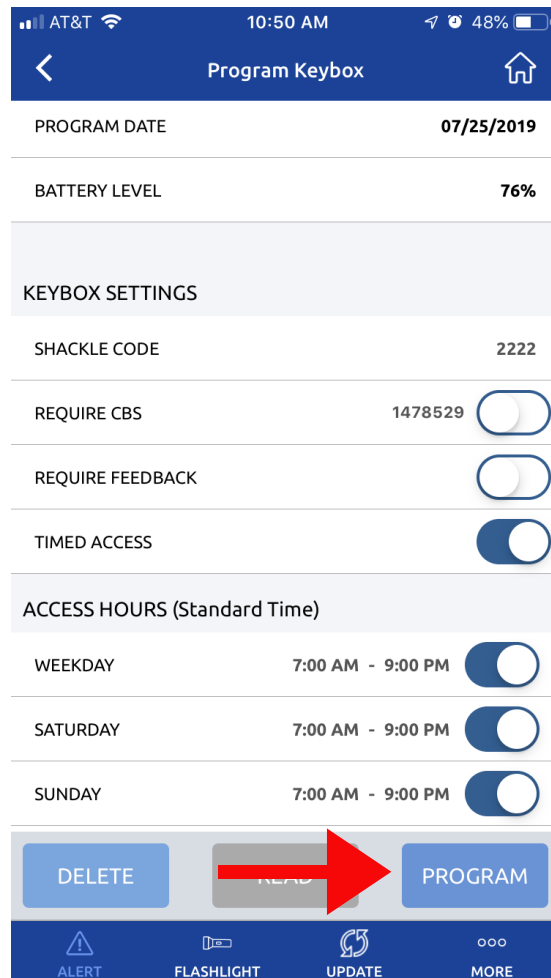

Once you have made the change, select program at the bottom of the screen. You will be prompted to enter the keybox shackle code. Be sure to push up on the bottom of the lockbox to activate the bluetooth and make the red light flash on the front of the box.